



# PACIFIC PLAY TENTS, INC.

## Sports Cabana

Item # 19101

Thank you for purchasing the Sports Cabana. We at Pacific Play Tents are certain that our cabana will provide you and your children with endless hours of fun and enjoyment all year-round.

We encourage you to read and understand each step of the set-up instructions prior to setting up your play tent. Invite your child to help out. Set up is easy and fun.

**Please remember - Do not apply excessive force to any part of the cabana poles during set-up.**

### Let's get started!

1. Assemble the 2 sets of shock-corded poles by connecting each section until you have 2 continuous poles. Now, spread out the cabana on the ground and pull out each of the four corners.
2. Choose a corner of the cabana and insert one of the poles in the pole sleeve. Slide the assembled pole through the sleeve and across the top of the cabana and into the second sleeve opposite the first. For example, if you choose the RIGHT FRONT corner of the cabana, you want to slide the pole through the sleeve and across the top of the tent, into the second sleeve opposite the first, and out to the LEFT REAR corner. Making sure that the pole sections do not separate. **Note: Do not put the ends of the poles into the corner pockets until both poles are all the way through the sleeves.**
3. Repeat the same process with the second assembled pole (the poles should crisscross over one another at the top of the tent).
4. Once you have completed this process, place each one of the four pole ends into its respective corner pocket (the cabana will now begin to take shape). Each corner holds only one pole end.
5. Use ties at the top of cabana to secure to poles.

### Some additional Tips

- ☛ Your cabana should be set up with adult supervision. Do not let children jump on the cabana.
- ☛ Exercise caution when two or more children are playing in the cabana.
- ☛ Use your cabana on soft or smooth surfaces only. Keep off of concrete or gravelly areas.
- ☛ Use caution when using your cabana indoors. Do not set the play tent up near furniture as child may tip the cabana over, falling onto the furniture.
- ☛ Keep cabana away from all heat sources.
- ☛ Your cabana is made from water repellent nylon. However, your cabana is not waterproof and should not be used in rainy situations. Cabana should not be left in the yard for prolonged periods of time, as sunlight can weaken or fade the nylon and continued watering by sprinkler systems can cause mildewing.
- ☛ Cabana will need to be weighted down in windy weather. Sand pockets are located on the side & back of your cabana for use during windy days.

### Summer fun...anytime anywhere!

