



# PACIFIC PLAY TENTS, INC.

## “Star Light” Lil’ Nursery Tent With Removable Floor Padding Item # 20004

Thank you for purchasing the “Nursery Tent”. We encourage you to read and understand each step of the set-up instructions prior to setting up your play tent. Set up is easy and fun.

**Please remember - Do not apply excessive force to any part of the tent poles during set-up.**

### Let’s get started!

1. Assemble the 2 sets of shock-corded poles by connecting each section until you have 2 continuous poles. Now, spread out the tent on the ground and pull out each of the four corners.
2. Choose a corner of the tent and insert one of the poles in the pole sleeve. Slide the assembled pole through the sleeve and across the top of the tent and into the second sleeve opposite the first. For example, if you choose the RIGHT FRONT corner of the tent, you want to slide the pole through the sleeve and across the top of the tent, into the second sleeve opposite the first, and out to the LEFT REAR corner. Making sure that the pole sections do not separate. **Note: Do not put the ends of the poles into the corner pockets until both poles are all the way through the sleeves.**
3. Repeat the same process with the second assembled pole (the poles should crisscross over one another at the top of the tent).
4. Once you have completed this process, place each one of the four pole ends into its respective corner pocket (the tent will now begin to take shape). Each corner holds only one pole end.
5. Using the nylon ties at the top of the play tent, tie the tent to the poles (where applicable).



### Some additional Tips

- ☛ The play tent should be set up with adult supervision. Do not let children jump on the play tent.
- ☛ Use your Lil’ Nursery on soft or smooth surfaces only (i.e. grass or carpet).
- ☛ Use caution when using the play tent indoors. Do not set the play tent up near furniture as child may tip the tent over, falling onto the furniture.
- ☛ Do not use the play tent near any heat source.
- ☛ This play tent is made from water repellent nylon. However, Pacific Play Tents are not waterproof and should not be used in rainy situations. Play tents should not be left in the yard for prolonged periods of time, as sunlight can weaken or fade the nylon and continued watering by sprinkler systems can cause mildewing.
- ☛ The play tent will need to be weighted down in windy weather.

**NEVER LEAVE CHILD UNATTENDED IN THE NURSERY TENT!**

**Fun...anytime anywhere!**